


Choose your pattern, make your own sewing!

HZL-HT710 With Automatic Thread Trimmer >8

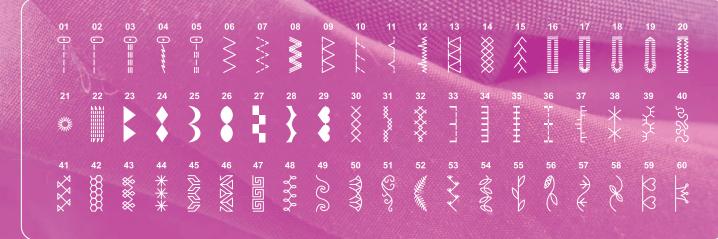

60 Sewing Patterns



Sew Comfortably!

Start/Stop Button



[Green] Ready to start or




Not ready to start

The color of the start/stop button indicates the status of the machine.



In bobbin winding condition

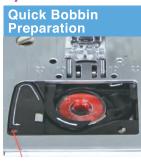

The bobbin preparation is easy. Just follow the guide and it is not necessary to pull up the bobbin thread.

Auto Needle Threader



The needle threader easily threads the needle and allows you to start sewing quickly.

Lock Stitch/ **Pattern Completion Lock Stitch**



You can sew locking stitch(3 stitches) just by pressing the button at the beginning or end of sewing. If you press the button while sewing a pattern, the machine stops after sewing one cycle of the pattern.

Sew Firm!



Press the button to change up/down position of needle instantly. Also you can change needle stop position and can even sew a half stitch.

Presser Foot Pressure



When sewing thin or thick fabrics, you can get comfortable feed.

Buttonhole

HZL-HT710 sews the buttonhole automatically according to the size of the button.

HZL-HT710

SPECIFICATIONS

Sewing Speed: 70 - 800 sti/min Needle: #9 - #16 Dimensions: 425(W)×300(H)×170(D)mm Weight (machine only): 5.9kg

Other Features

- Free Arm Drop-in Bobbin Drop Feed
- Easy to Start Sewing Thick Fabrics
- Button Sewing Reverse Button LED Lighting

Accessories



A: Standard Presser Foot B: Zipper Foot C: Satin Stitch Foot D: Overcasting Foot

E: Blind Hem Foot F: Button Sewing Foot G: Buttonhole Foot H: Seam Ripper/Brush I: Screwdriver (L & S) J: Second Spool Pin


K: Pack of Needles (3x) L: Edge/Quilting Guide M: Spool Holder (L & S)

N: Spool Pin Felt O: Stitch Pattern Plate Clip P: Bobbin (3x)

Option: Wide Table

Easy to Use!

Size of Stitch Pattern and Needle Position

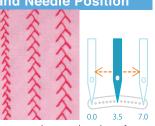

You can change the size of stitch patterns as well as the needle positions.

Foot Controller with **Needle Up and Down Feature**



You can quickly press one step on the foot controller to change the needle position go up or down into the fabric.

Stitch Pattern Plate





JUKI CORPORATION

2-11-1, TSURUMAKI, TAMA-SHI, TOKYO 206-8551, JAPAN https://www.juki.co.jp



